


Spare Parts List & Diagram

DHC Classic

No.	Spare part	DHC 3-1 Classic	DHC 3-2 Classic	DHC 4-2 Classic	DHC 4-3 Classic	DHC 5-2 Classic
1	Heating system	165889	167769	167770	165890	167771
2	Flow switch	165273	165273	162162	162162	162162
3	Thermostat	162472	162472	162472	162472	162472
4	Switch	168026	168026	168026	168026	168026
5	Housing (back)	326968	326968	326968	326968	326968
6	Plumbing connection	326589	326589	326589	326589	326589
7	Housing (front)	326965	326965	326965	326965	326965
8	Safety thermal cut-out	162474	162474	162474	162474	162474
9	Wiring block	026010	026010	026010	026010	026010
10	Copper tube	162314	162314	162314	162314	162314
11	Module chassis	342052	342052	342052	342052	342052
12	Locking sheet	326234	326234	326234	326234	326234
13	Filter screen	275981	275981	275981	275981	275981

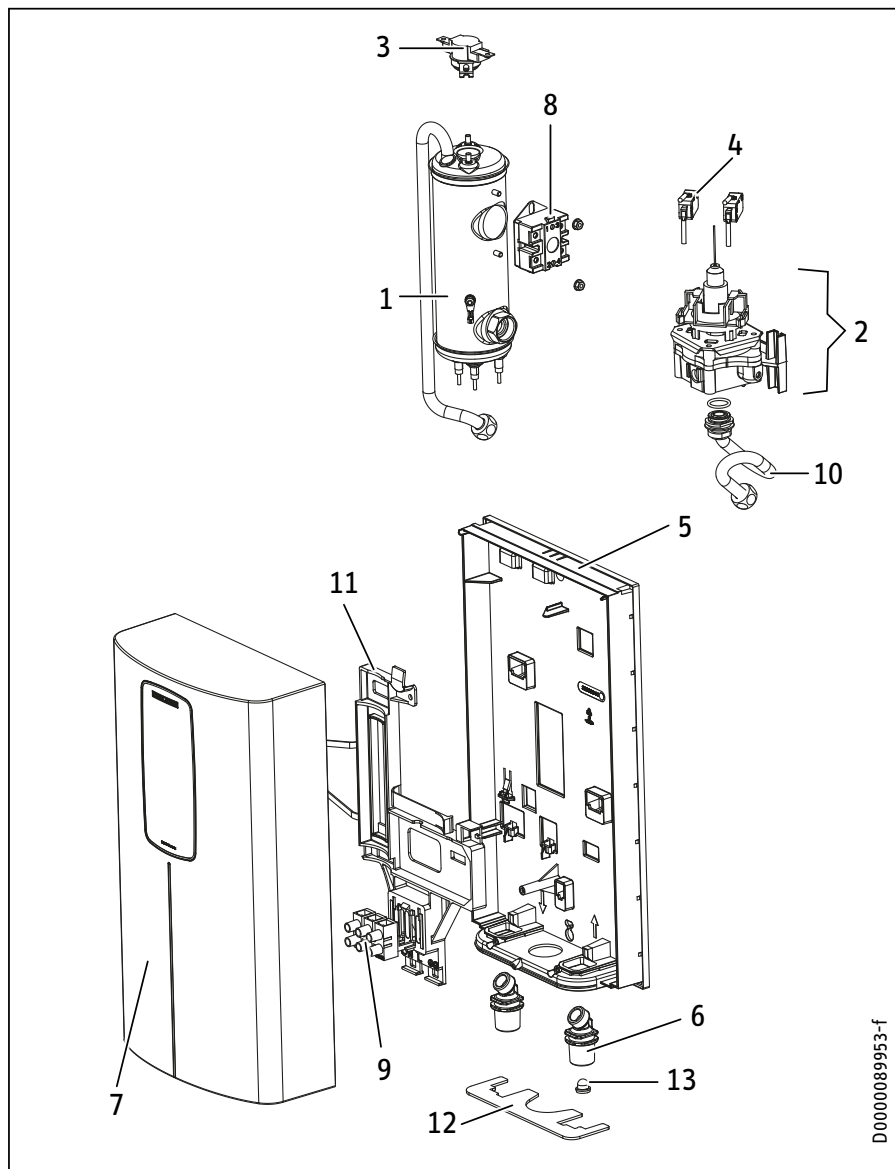


D0000089953-f

rev. 7-2020

Spare Parts List & Diagram

DHC Classic

No.	Spare part	DHC 6-2 Classic	DHC 6-3 Classic	DHC 8-2 Classic	DHC 9-3 Classic	DHC 10-2 Classic
1	Heating system	171117	342051	167772	296874	167773
2	Flow switch	171105	171105	162164	162165	162165
3	Thermostat	162472	162472	162472	162472	162472
4	Switch	168026	168026	168026	168026	168026
5	Housing (back)	326968	326968	326968	326968	326968
6	Plumbing connection	326589	326589	326589	326589	326589
7	Housing (front)	326965	326965	326965	326965	326965
8	Safety thermal cut-out	162474	162474	162474	162474	162474
9	Wiring block	026010	026010	026010	026010	026010
10	Copper tube	162314	162314	162314	162314	162314
11	Module chassis	342052	342052	342052	342052	342052
12	Locking sheet	326234	326234	326234	326234	326234
13	Filter screen	275981	275981	275981	275981	275981

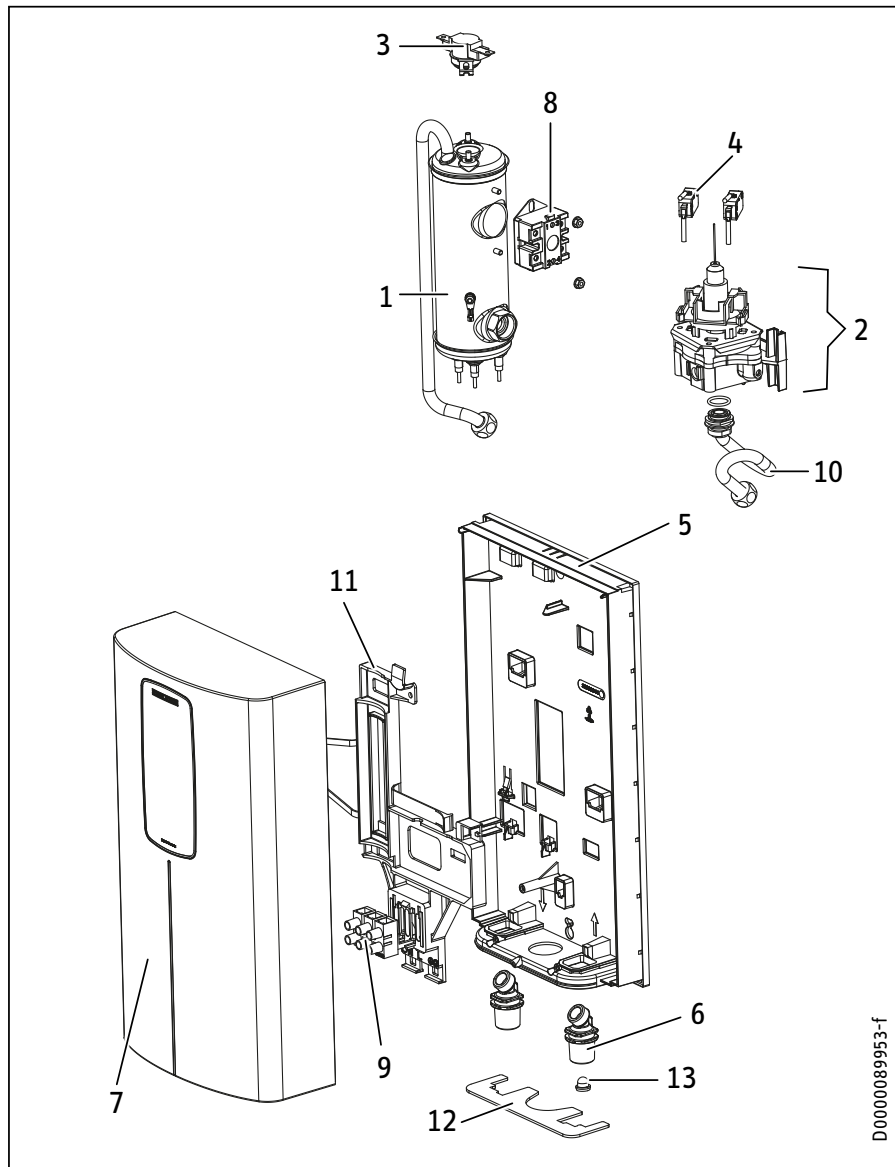

D0000089953-f

rev. 7-2020